

## Selection and Ordering Data

Detailed information on the transmitters can be found for the respective products under "Transmitters for temperature".

| Transmitter to be fitted   | Order code              |
|--|-------------------------|
| To order the sensor with a built-in temperature transmitter, add <b>"-Z"</b> to the Order No. of the sensor, and supplement by the following Order code: |                         |
| • SITRANS TH100  |                         |
| - without Ex   | <b>T10</b>              |
| - EEx ia IIC and EEx n for zone 2  | <b>T11</b>              |
| - FM   | <b>T13</b>              |
| • SITRANS TH200  |                         |
| - without Ex   | <b>T20</b>              |
| - EEx ia IIC and EEx n for zone 2  | <b>T21</b>              |
| - FM (IS, I, NI)   | <b>T23</b>              |
| • SITRANS TH300  |                         |
| - without Ex   | <b>T30</b>              |
| - EEx ia IIC und EEx n for zone 2  | <b>T31</b>              |
| - FM (IS, I, NI)   | <b>T33</b>              |
| • SITRANS TH400 PA   |                         |
| - without Ex   | <b>T40</b>              |
| - EEx ia   | <b>T41</b>              |
| • SITRANS TH400 FF   |                         |
| - without Ex   | <b>T45</b>              |
| - EEx ia   | <b>T46</b>              |
| Customer-specific setting of the built-in transmitter (specify settings in plain text)   | <b>Y11<sup>1)</sup></b> |

<sup>1)</sup> For TH400 FF available soon