LZS, LZX Plug-In Relays


Relay couplers

More information

Notes on configuration

PT series

Mounting the LZS:PT17024 fixing/ejection bracket on the LZS:PT787.0 standard plug-in base with screw terminals:

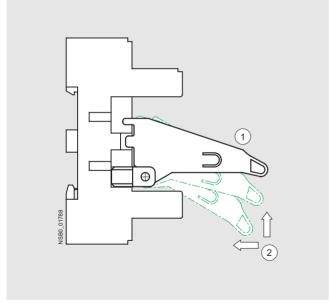


Legend:

- 1 Locking position
- ② Mounting direction

RT series

Mounting the LZS:RT17016 fixing/ejection bracket on the LZS:RT7872.plug-in base

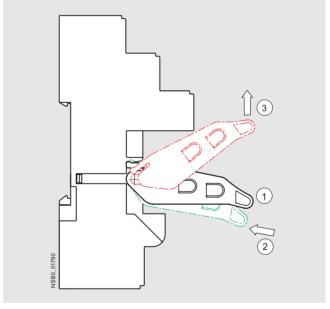

Legend:

- 1 Locking position
- Mounting direction
- 3 Demounting direction