

Function	Electronic trip unit version			COM10 module	SIMOCODE	Breaker Data Adapter	Breaker Data Adapter <i>Plus</i>
	TM	ETU	LCD ETU				
Functions of the communication components							
Transmission of the operating state (only ON, OFF, tripped) to the PROFIBUS	✓	✓	✓	--	✓	--	--
Transmission of the operating state (ON, OFF, tripped, warnings, causes of tripping, event log) to the PROFIBUS	--	--	✓	✓	--	☐	☐
Display of measured values (current only) and parameters in trip unit, change parameters through display	--	--	✓	☐	☐	☐	☐
Transmission of maximum value of present current in %	✓	✓	✓	--	✓	☐	☐
Transmission of individual present phase currents incl. min./max. and time stamp	--	--	✓	✓	--	☐	☐
Transmission of identification data	--	--	✓	✓	--	☐	☐
Transmission of switch information on HTML basis locally to a PC	--	--	✓	☐	--	✓	✓
Transmission of switch information on HTML basis through Ethernet	--	--	✓	☐	--	--	✓
Read out and adjust protection parameters through PROFIBUS	--	--	✓	✓	--	☐	☐

- ✓ Required
- Function can optionally be taken over by more than one trip unit.
- Function can optionally be taken over by one of these modules.
- ☐ Not necessary for this function, optionally combinable.
- Function not available.