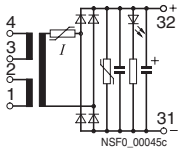
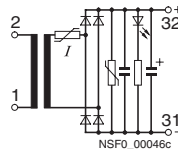
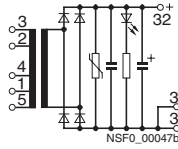
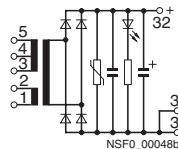
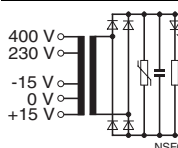


Terminal designations and terminal assignments

		Rated input voltage U_{1N}	Primary connections and links		
		V	Rated voltage U_{1N} V	Connections	Links
 1) 2) 3) 4) 32 31		Type 4AV21 02 and 4AV23 02			
		230 (240) - 115 (120)	230 (240) 115 (120)	1-4 1-4	2-3 1-3, 2-4
 1) 2) 32 31		Type 4AV21 06 and 4AV23 06			
		400 (415)	400 (415)	1-2	--
4AV21 02, 4AV23 02					
 1) 2) 3) 4) 5) 31 32 31 31		Type 4AV2. 00			
		400 (415) - 230 (240) ± 15	415 400 (415) 385 245 230 (240) 215	5-3 1-3 4-3 5-2 1-2 4-2	-- -- -- -- -- --
 1) 2) 3) 4) 5) 31 32 31 31		Type 4AV2. 01			
		400 (415) - 230 (240) - 115 (120)	400 (415) 230 (240) 115 (120)	1-5 1-4 1-4	2-3 2-3 1-3, 2-4
 1) 2) 3) 4) 5) M M L+		Type 4AV41			
		400 V 230 V -15 V 0 V +15 V	415 400 385 245 230 215	400 V + 15 V 400 V 0 V 400 V - 15 V 230 V + 15 V 230 V 0 V 230 V - 15 V	-- -- -- -- -- --

1) For Cage Clamp terminals, the ground connection is routed to the terminal.
The order of terminal assignments then changes as follows

1) 2)

.