
3RW Soft Starters


Project planning aids

3RW40 connection examples for control circuit

Control by switch using internal 24 V DC supply




external power supply




3RW40 connection examples for main circuit 3)


3RW40 - 3-phase motor with 3NA/3NE fuse








Control by pushbutton

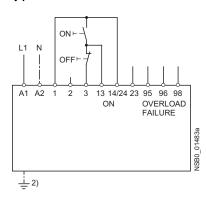

of a main contactor

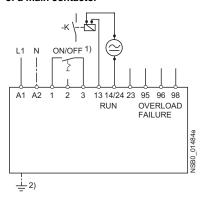

1) Caution: Risk of restarting
When operating with a switch (ON/OFF) a new, automatic restart will take place automatically if the start command is still active at terminal 3.

- ²⁾ Grounding necessary for fan connection to 3RW40 5...
- 3) As an alternative, the motor feeder can also be installed as a fuseless or as a fused version. Fuse and switching device coordination, see Technical Specifications.

 The wiring diagrams are provided only as examples.